


5.5" minimum
tape overlap

FSS45DC[™]
AROMATIC
New polyurea membrane

VF20[™]
PRIMER

Existing sheet membrane

PrePrufe® Tape

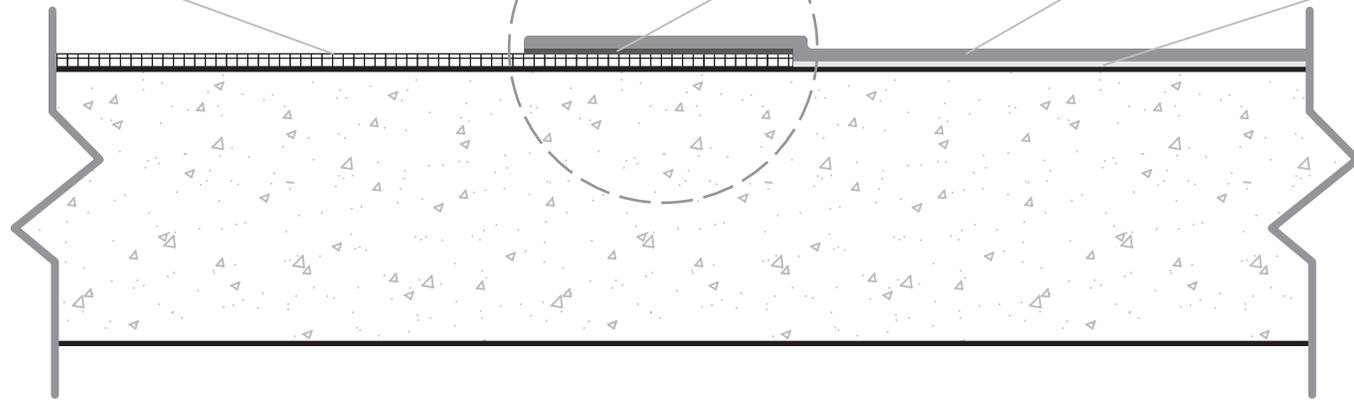

A Tie-in at old sheet membrane using
PrePrufe® tape, typical walls or slabs

Technical Office: 686 S. Adams Street Kansas City, KS 66105 (800) 321-0906	
SCALE: NTS REVISION: 9/14/2015	Tie In at Sheet Waterproofing [Layout A]